


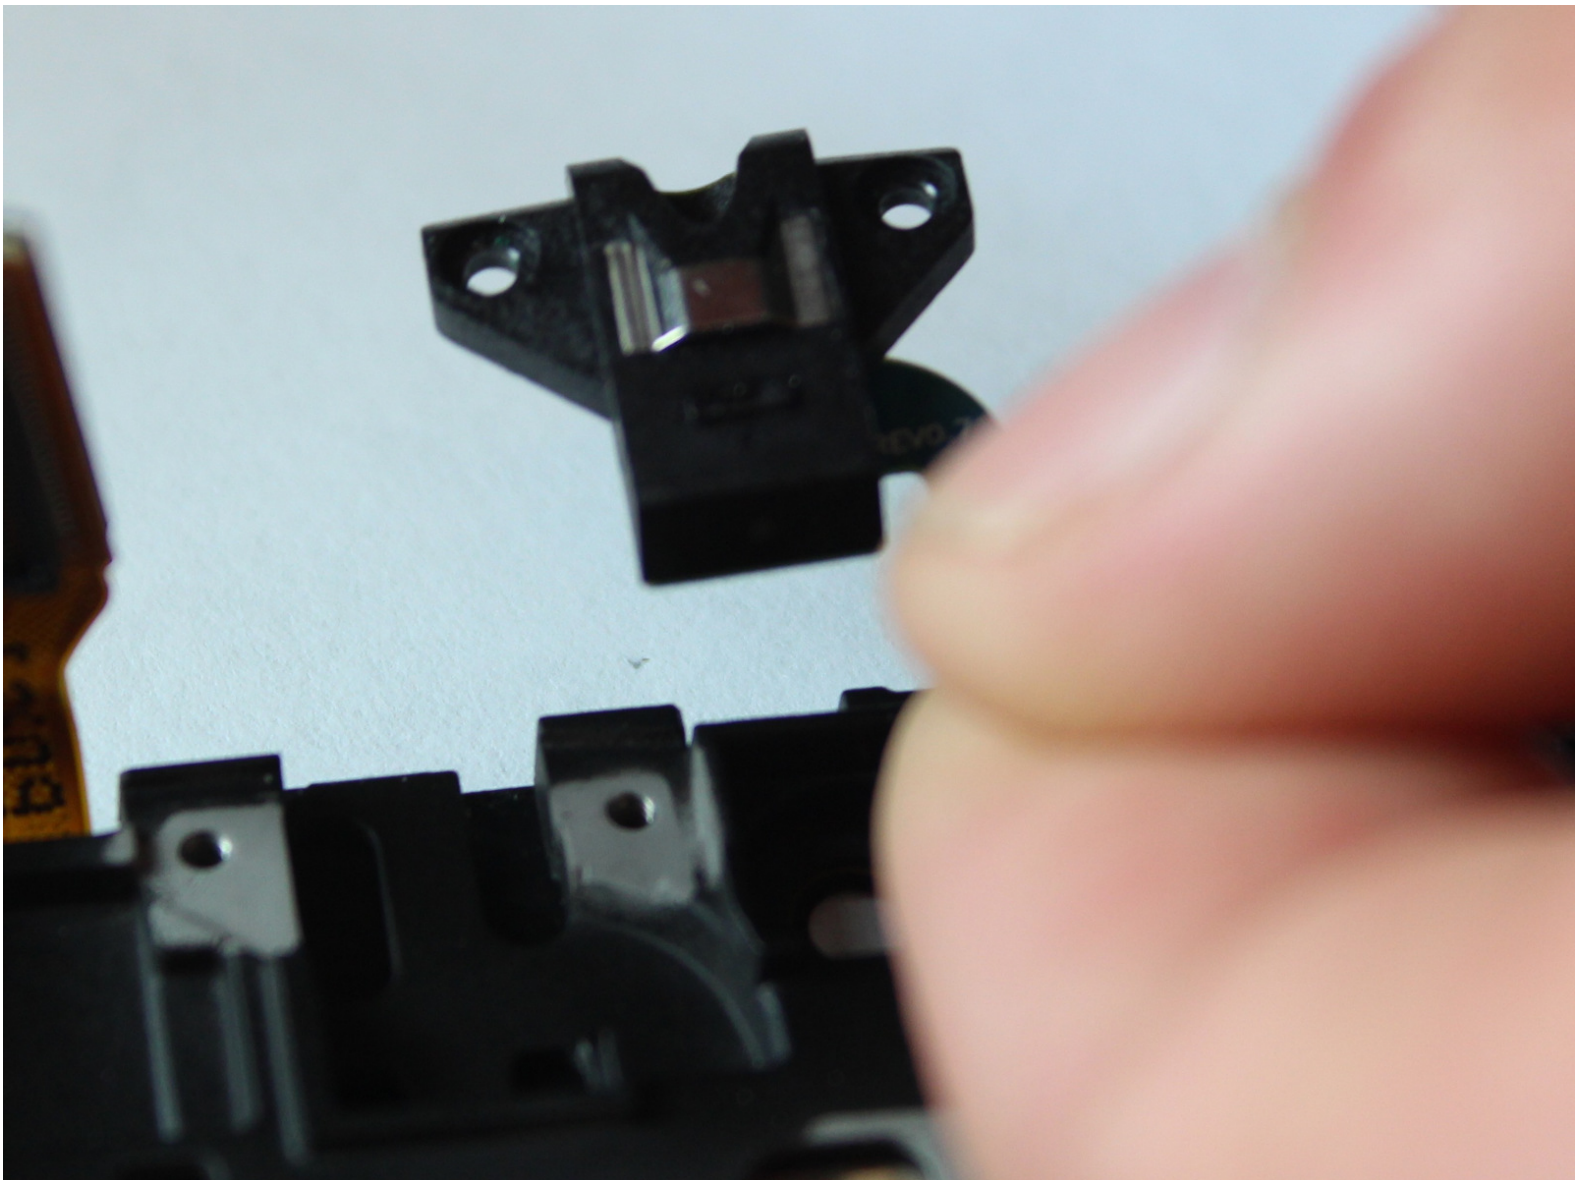

Samsung Galaxy Tab 3 8.0 Audio Jack Replacement

If connected audio devices don't properly produce sound even after replacement, use this guide to learn how to exchange the port.

Written By: anthony gonzalez





TOOLS:



- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)



PARTS:



- [Galaxy Tab 3 8" Wi-Fi Headphone Jack](#) (1)
- [Samsung Galaxy Tab 3 8.0 Audio Jack](#) (1)

Step 1 — Battery - Open up the tablet

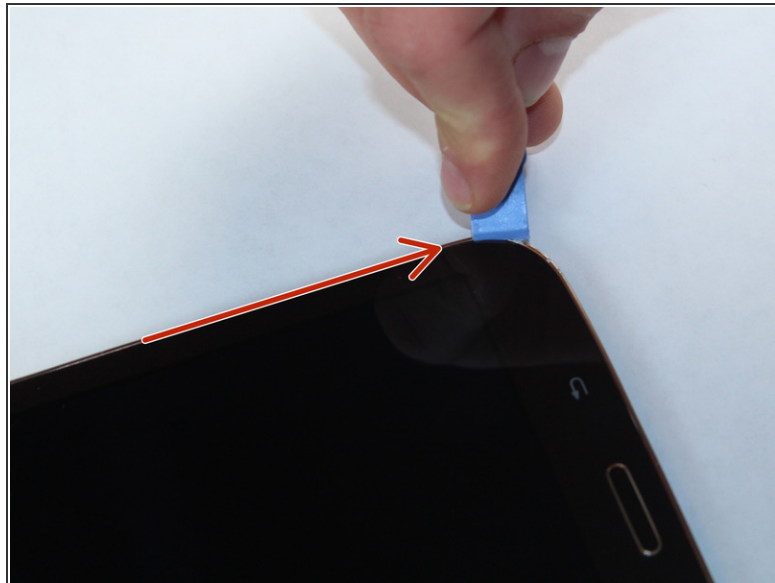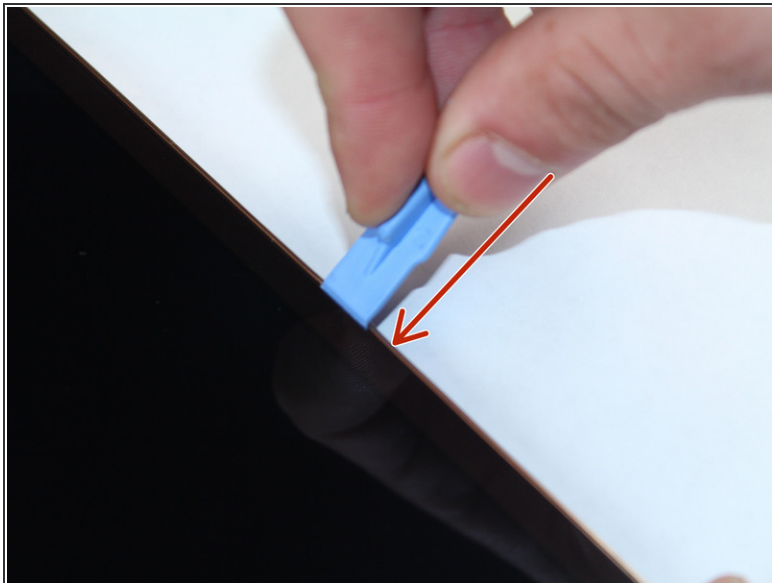



- Start out by separating the screen from the back cover using the larger plastic opening tool to pry them apart.

Step 2 — Remove Back Cover

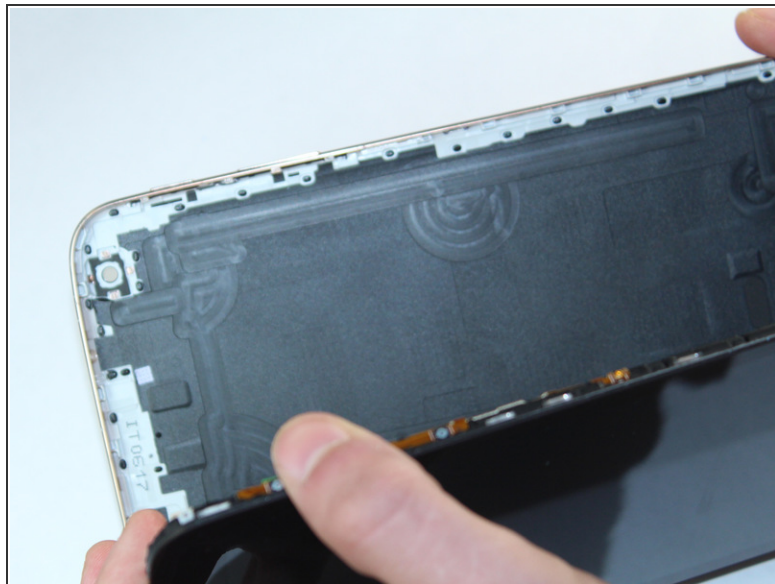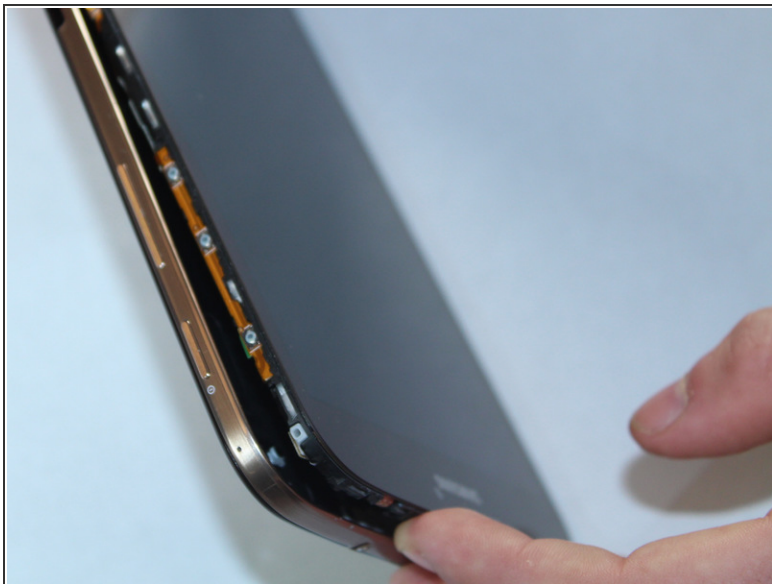


- Once every part of the screen is separated from the back cover, you should be able to fully remove it with your hands.

Step 3 — Disconnect Battery

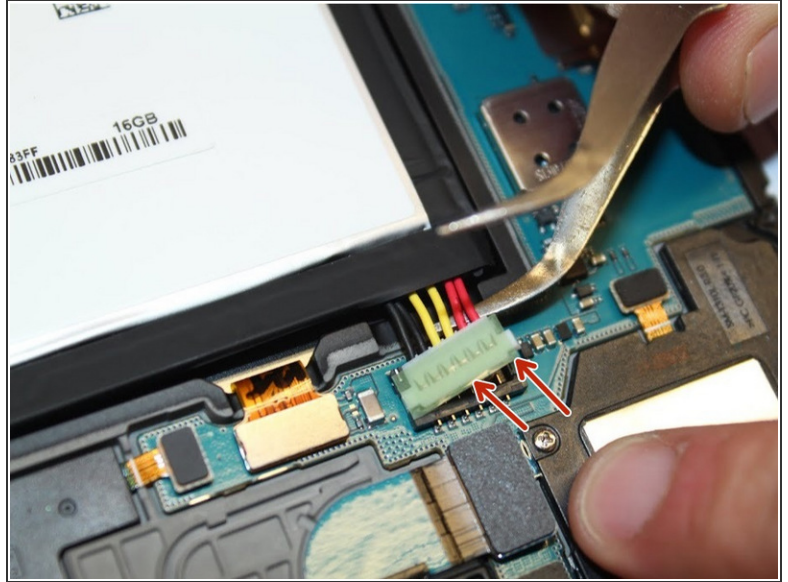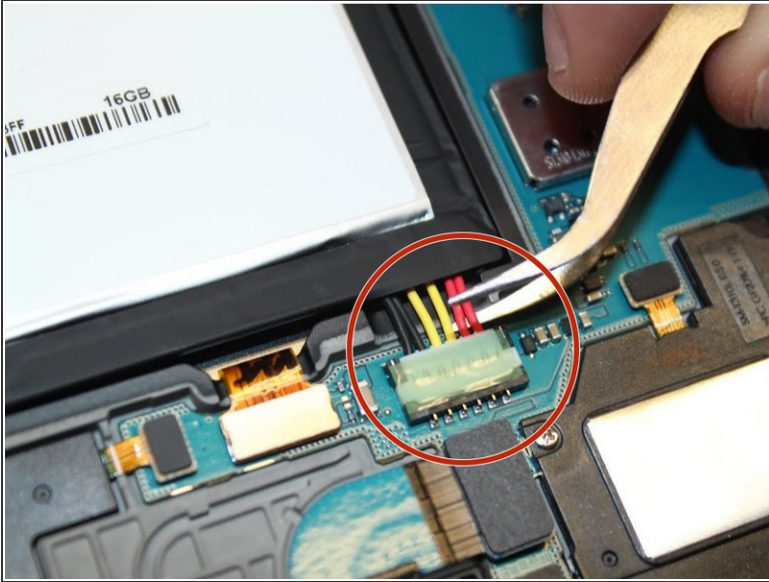

- To remove the battery you must use something small, such as tweezers, to disconnect the battery from its port.


 Note: the connection lifts up to remove

Step 4 — Remove Battery






- After the battery is disconnected you may use your hands to pull out the battery. It may be a little difficult because there is adhesive on the backside of the battery.

Step 5 — Disconnect Audio Jack

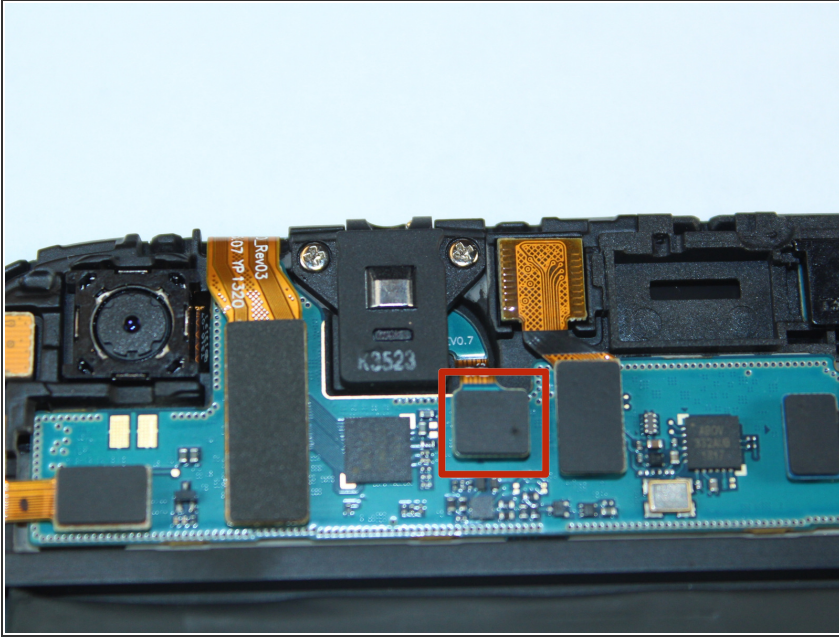

- Disconnect Audio Jack from Motherboard.

Step 6 — Unscrew Audio Jack

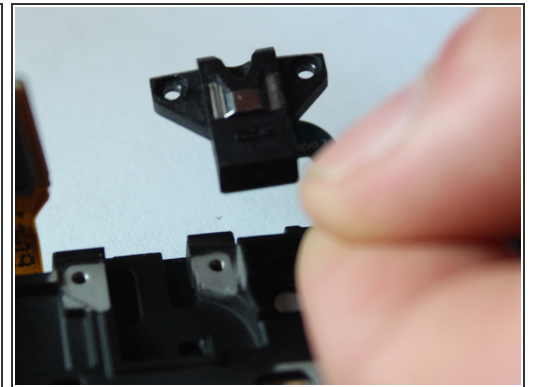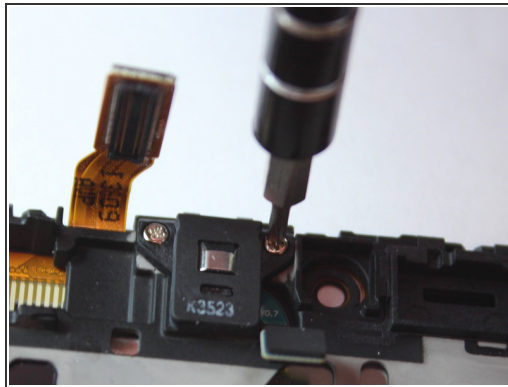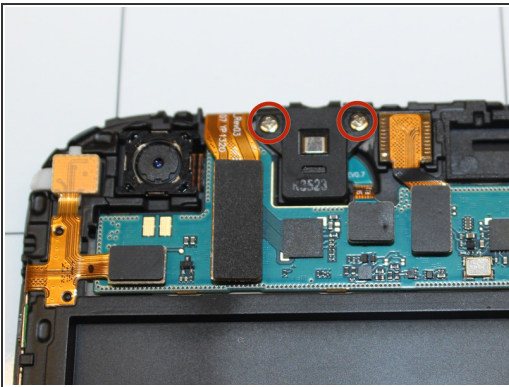

- Unscrew the 2.9mm phillips #000 screws from the audio jack and remove component from the tablet.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-14 01:20:42 PM.